

Comfort Sleeper Total Disassembly Instructions
American Leather 6/10/06

ALL PARTS REMOVED WILL BE REUSED DURING ASSEMBLY




1. Open bed to this position and remove spring from each arm




2. Position bed until the least amount of tension is on the spring. Grasp spring firmly and remove



3. Position bed as shown and remove front rail

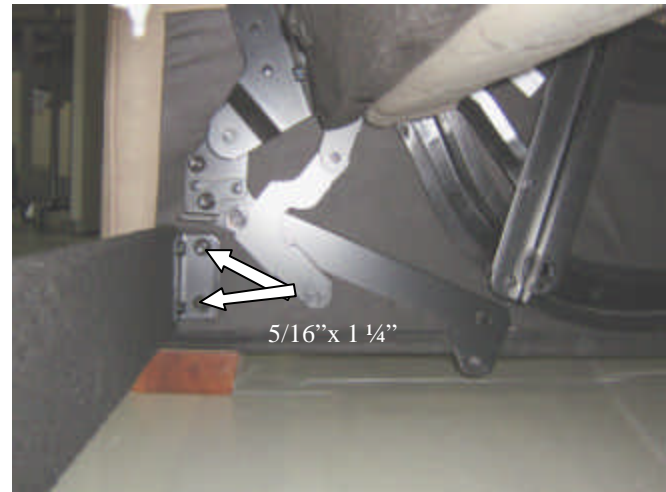

4. Remove two front rail bolts from each arm

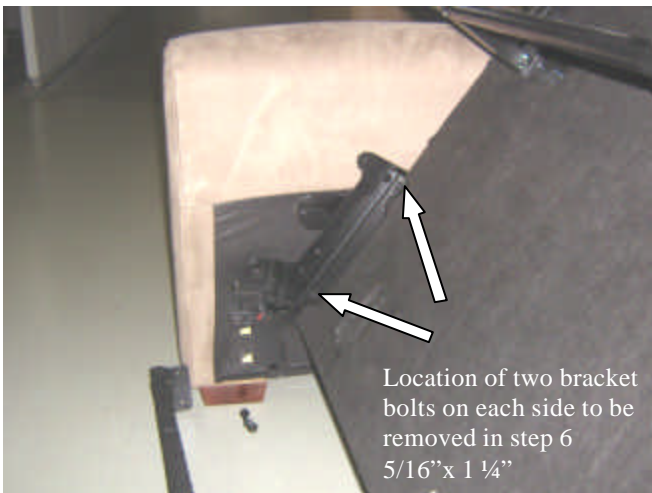

5. Front rail removed



6. Open bed and remove the bolts shown in step 5

**Comfort Sleeper Total Disassembly Instructions
American Leather 6/10/06**

ALL PARTS REMOVED WILL BE REUSED DURING ASSEMBLY



7. Lift front and middle bed section away from sofa



8. Pull up on bed bracket and back bed section at the same time to rotate bed section to a vertical position. Move bed section part way and then repeat on the other arm until section is vertical.



9. Remove green webbing strap from bed section



10. Remove one bolt from each arm as shown



11. Prop up back of sofa with wood blocks or books




12. Press top of the arm down to loosen back hooks

Comfort Sleeper Total Disassembly Instructions
American Leather 6/10/06


ALL PARTS REMOVED WILL BE REUSED DURING ASSEMBLY



13. Lift Outside Back up and back to remove

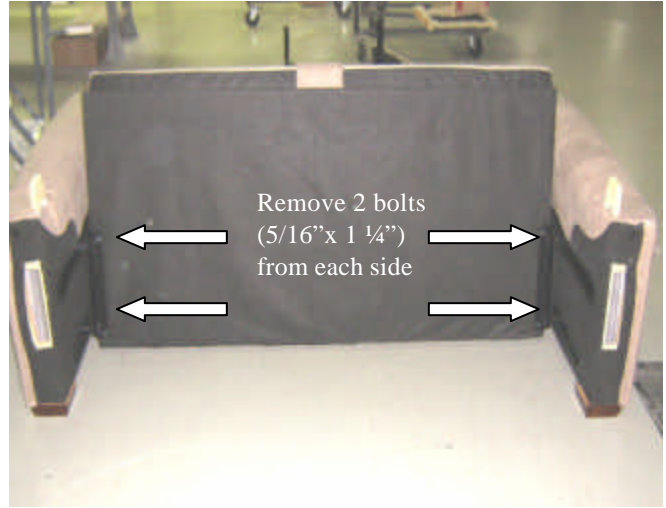

14. Remove 4 bolts as shown and lift Back Bed Section out of the frame

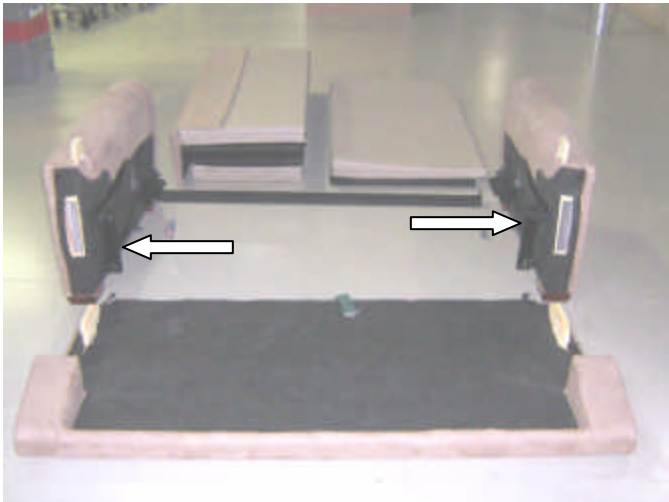

15. Bed shown disassembled. Hold the back of the mechanism in the plastic tracks when moving the arms to prevent bending the mechanism linkage (See arrows above)



16. If leg mechanism needs to be replaced then place the front and middle bed sections face down on the floor, remove and reuse cross tubes when installing new mechanism